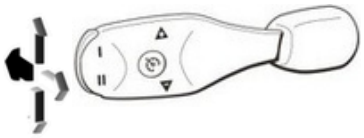
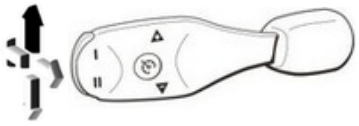
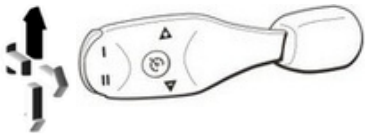
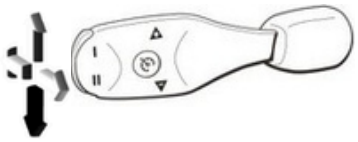
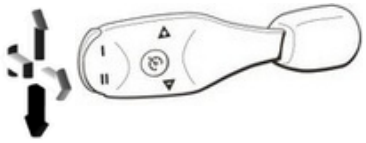
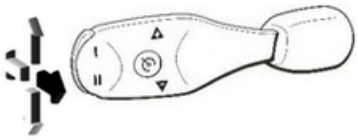
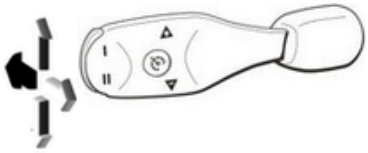
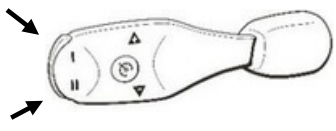
tempomaty.pl

Manual CM35 AP500

Function	Action	Cruise Control
switch On		green
Activate (set)		orange
Accelerate		Short press (<1 sec) Speed adjustment by 1 km/h Long press (>1 sec) Speed adjustment by 10 km/h orange
Decelerate		Short press (<1 sec) Speed adjustment by 1 km/h Long press (>1 sec) Speed adjustment by 10 km/h orange
Resume		orange
De-activate (Cancel)		green
switch Off		off
Memory		program: press & hold for 2 sec. usage: press 1x

Cruise Control

- The Cruise Control can be used from 35 km/h
- Don't use the Cruise Control during bad weather
- The Cruise Control slows down using engine braking. It does not apply the brakes
- It’s always possible to accelerate in the interim by pressing the throttle. After that the car will resume the set speed if the speed has not been increased by more than 50% compared to the set speed

The Cruise Control will switch off with:

- Braking
- Pressing the clutch (if connected)
- De-activate
- Switch off Cruise Control
- Decrease speed by 25% compared to the set speed
- Increase speed by 50% compared to the set speed
- Switch off the ignition